

DEALER TRAINING



PARTS & SERVICE DIVISION

AID NO.: S1056

SUBJECT: RELAYS - LINE FUSES - DIODE LOCATIONS

MODEL: TR7 1979 MODEL



P R E F A C E

The information contained in this training aid is provided as an easy reference guide for technicians. More detailed information will be available in the appropriate Workshop Manual.



Copyright Jaguar Rover Triumph Inc.



May, 1979

HEADLAMP RUN-STOP RELAY - R/H

Location: Behind glove box on right hand side of fuse panel.

Upper R/H one of three



Wiring Diagram

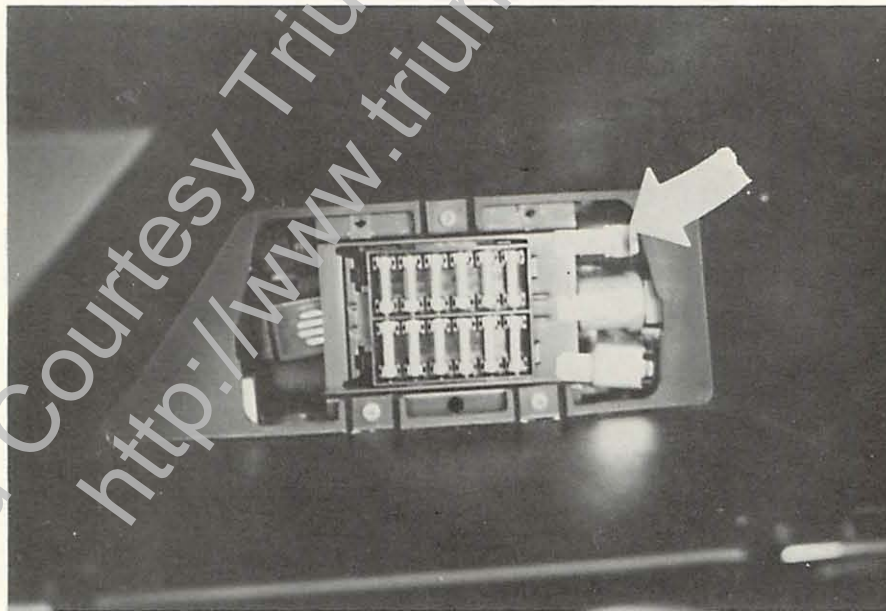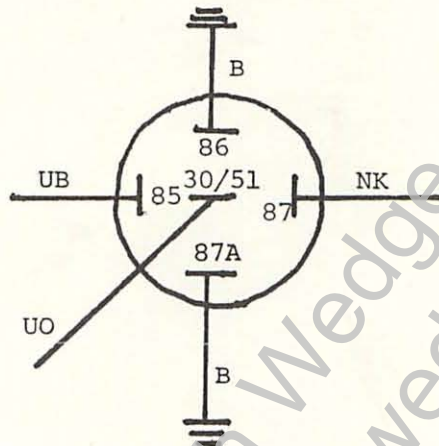

STARTER RELAY

Location: Behind glove box on right hand side of fuse block panel.
Center R/H 1 of 3



Wiring Diagram

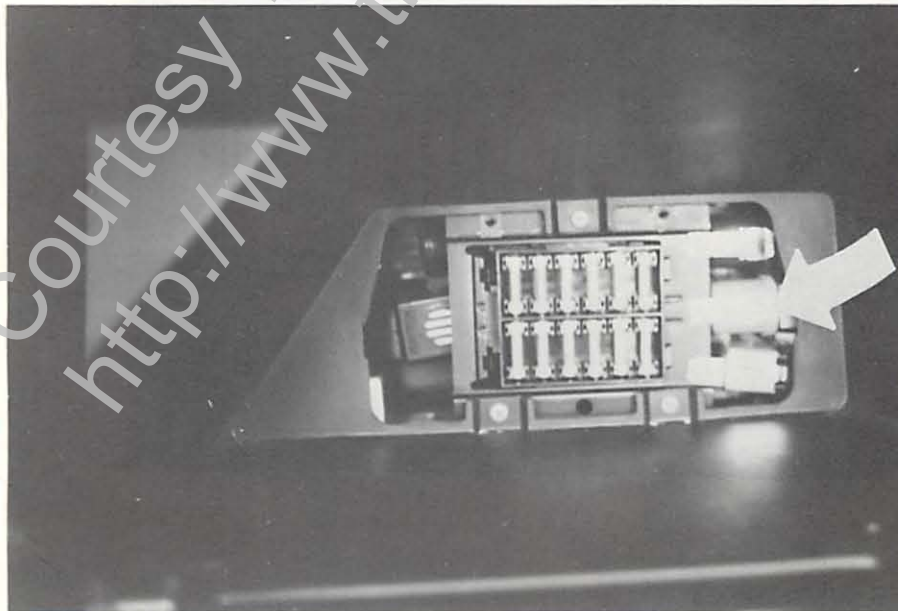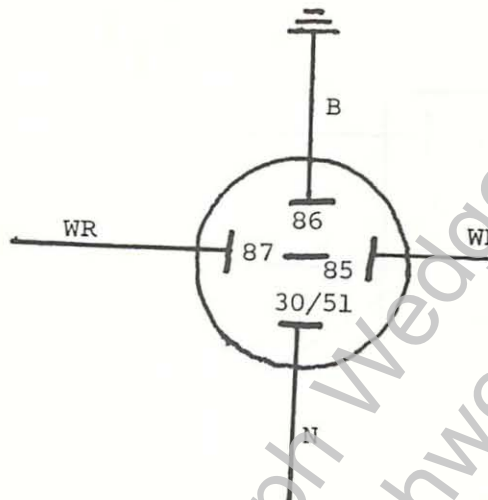

HORN RELAY

Location: Behind glove box on right hand side of fuse block panel
Lower R/H 1 of 3



Wiring Diagram

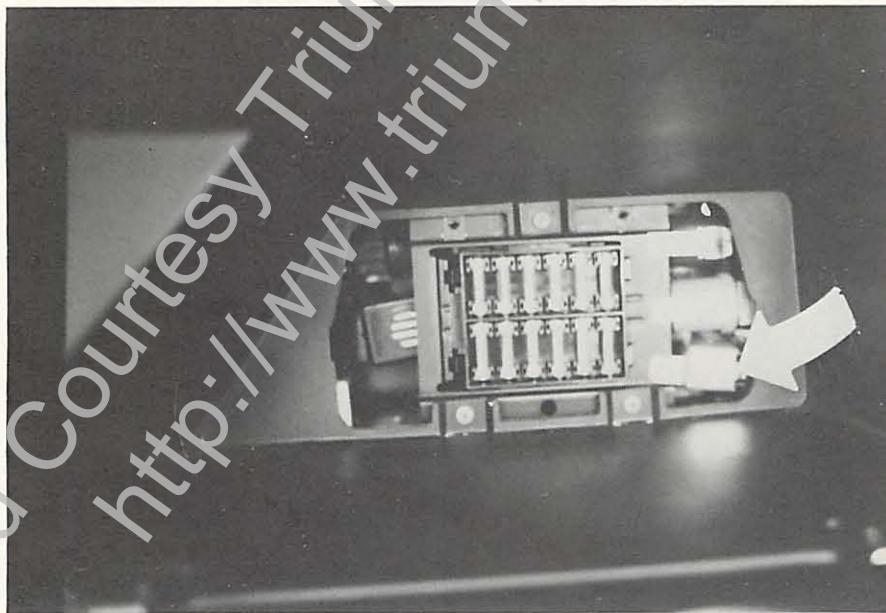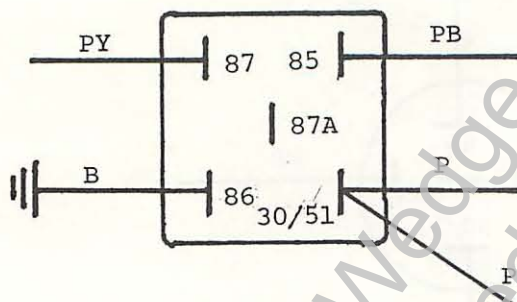

HEAD LAMP RELAY - L/H

Location: Behind glove box on left hand side of fuse block panel.
Upper L/H one of one



Wiring Diagram

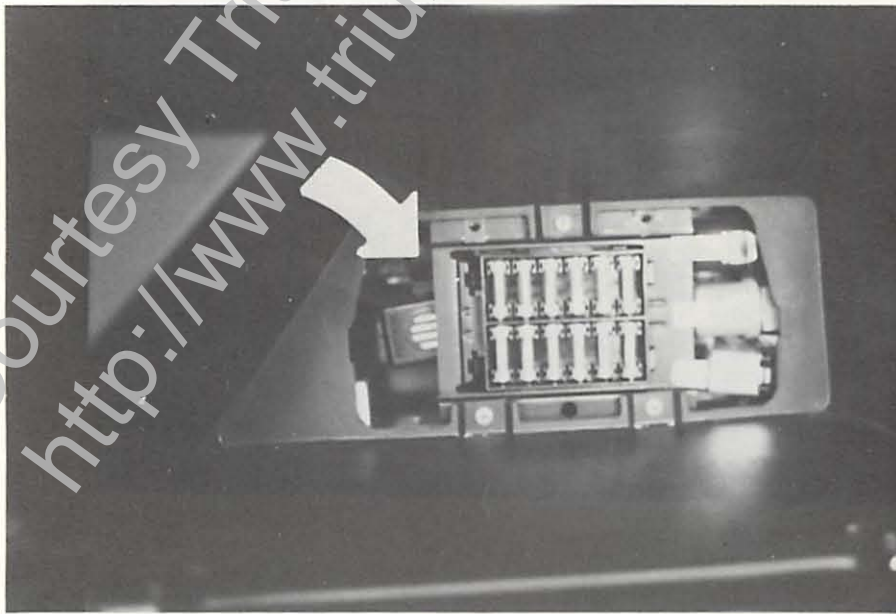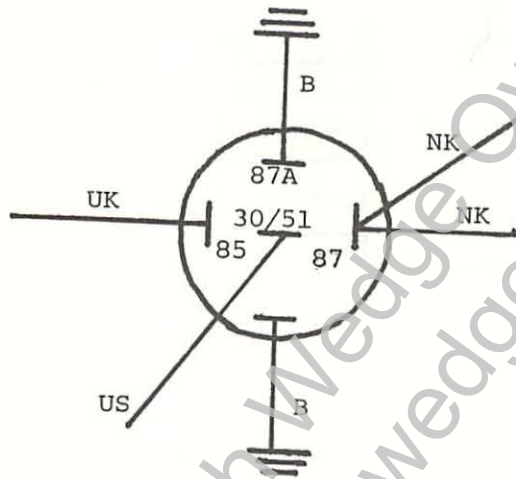

BUZZER - TIMER UNIT

Location: Behind glove box on left hand side of fuse panel below
L/H headlamp relay.



Wiring Diagram

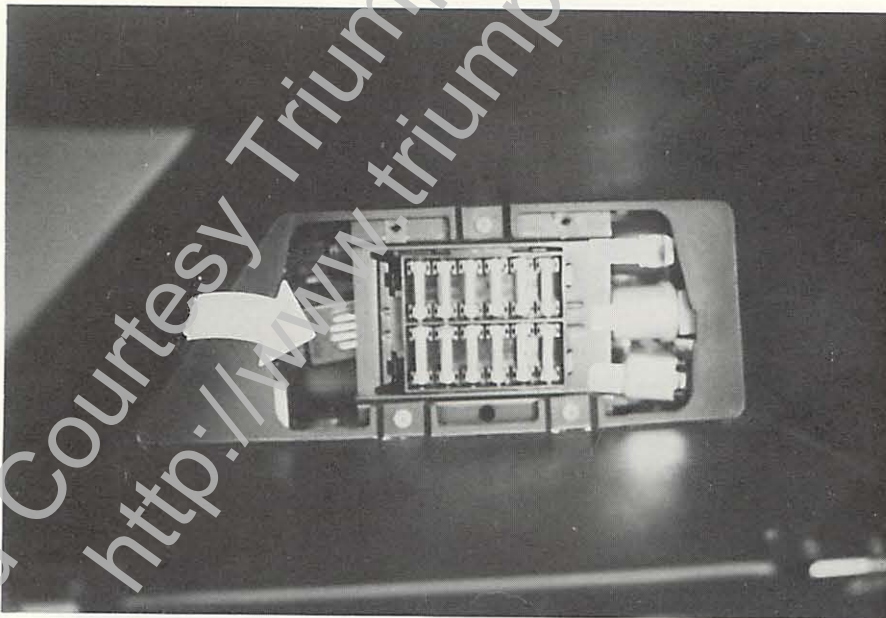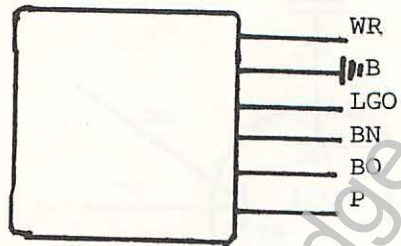

HAZARD FLASHER UNIT

Location: Behind glove box on left hand side of fuse panel, below
buzzer - timer unit.



Wiring Diagram

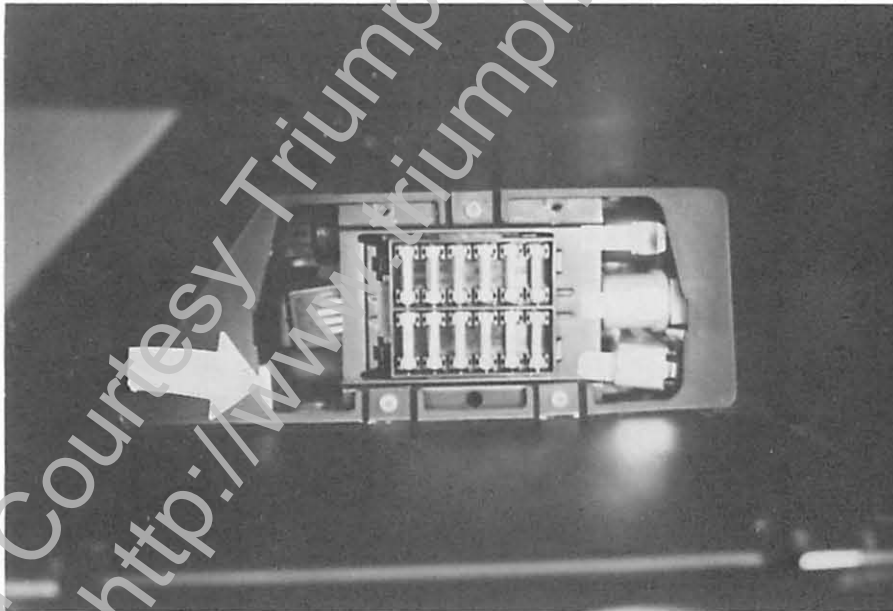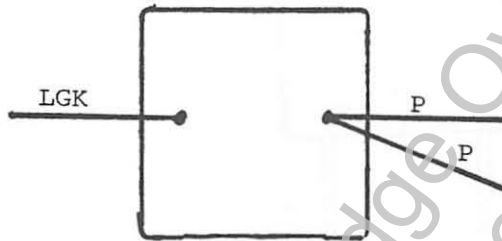

HEADLAMP MOTOR CIRCUIT BREAKER

Location: Below and to the left of the fuse block panel.


Wiring Diagram

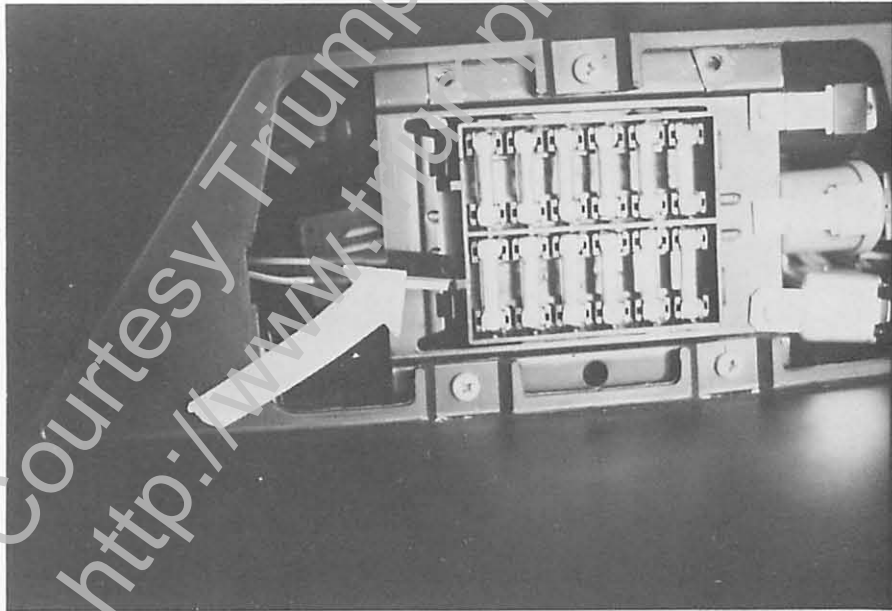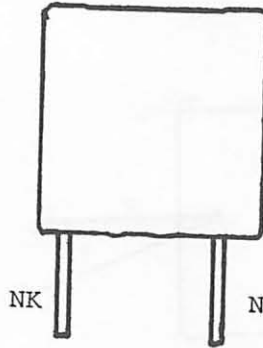

DIRECTIONAL SIGNAL FLASHER UNIT

Location: Over drivers side left hand kick panel, just above hand-brake release.



Wiring Diagram

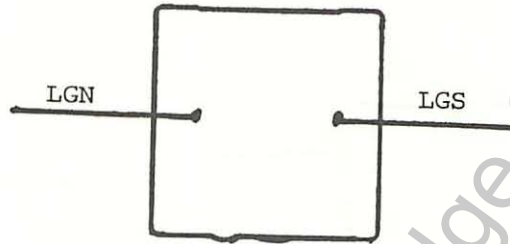

LOW FUEL DELAY UNIT

Location: Behind instrument cluster (similar in appearance only, to standard voltage stabilizer).

Wiring Diagram

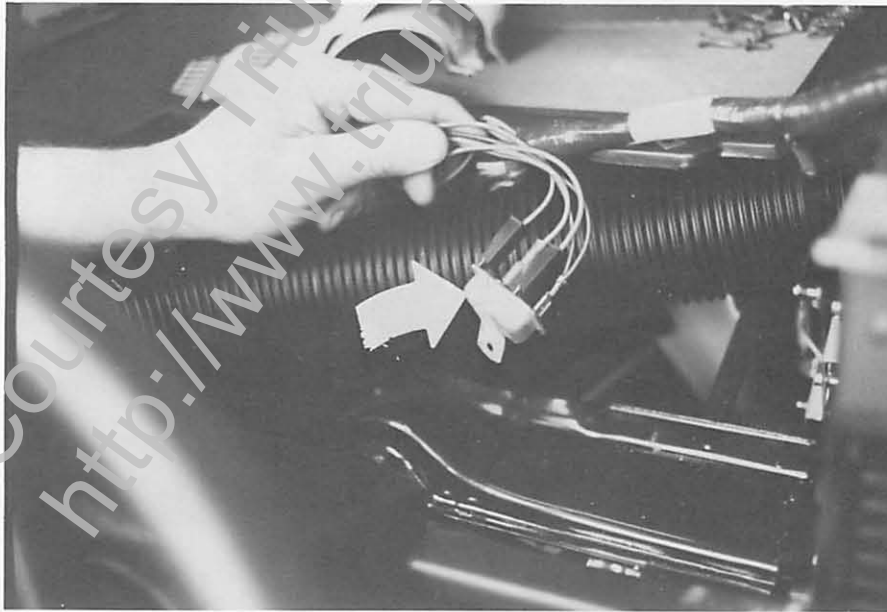
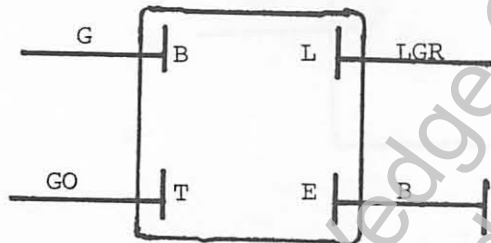


A/C COMPRESSOR CLUTCH RELAY

Location: In forward left hand corner of engine compartment on relay panel.

Upper L/H one of two.

Wiring Diagram

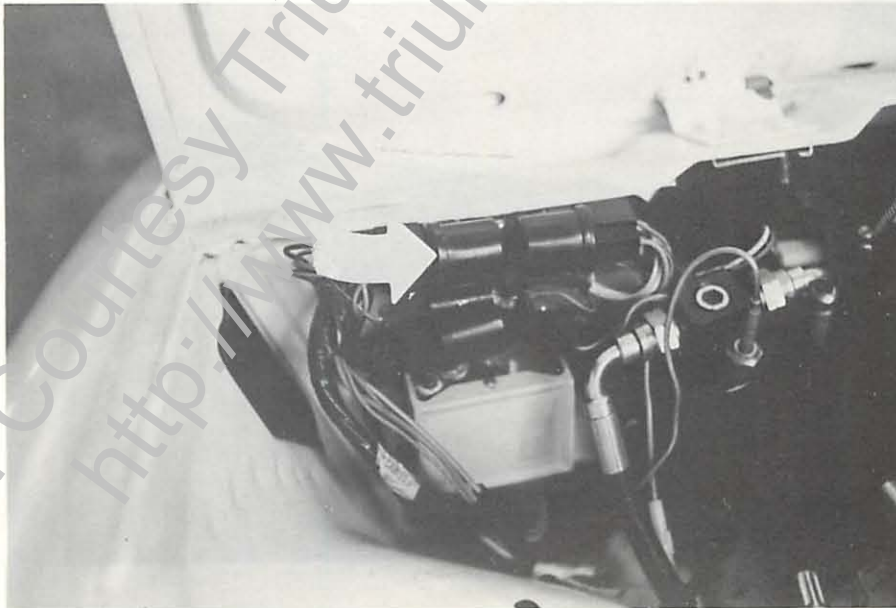
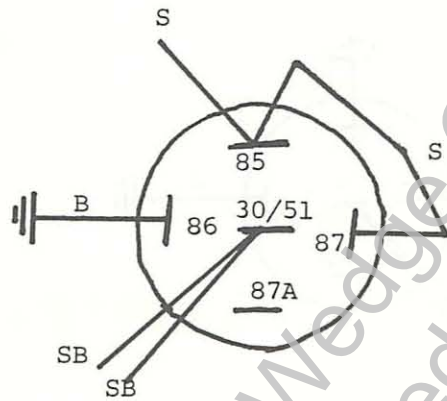


FAN RELAY

Location: In forward left hand corner of engine compartment on relay panel.

Lower L/H one of two

Wiring Diagram

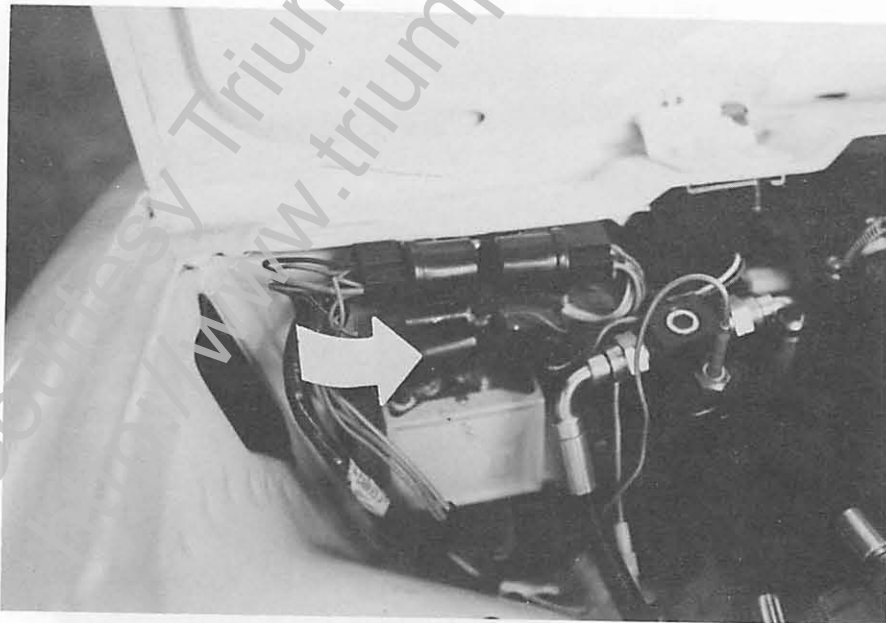
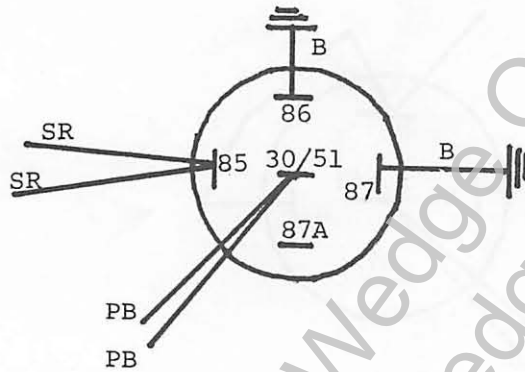


AIR CONDITIONING MAIN RELAY

Location: In forward left hand corner of engine compartment on relay panel.

Upper R/H one over A/C delay unit.

Wiring Diagram

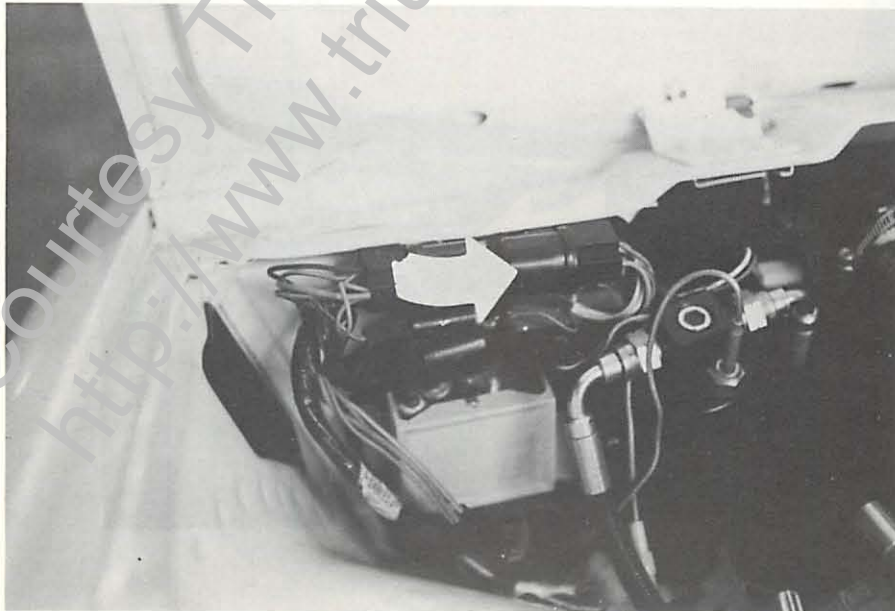
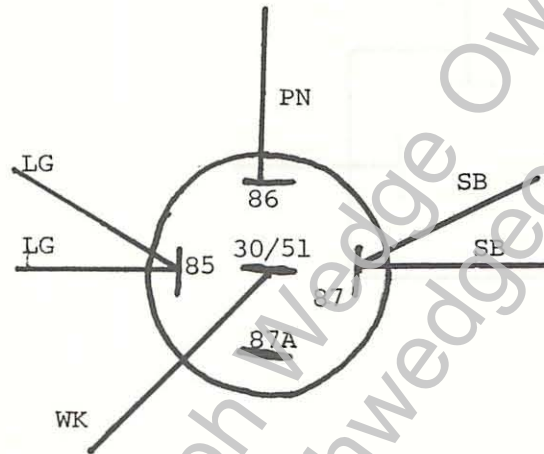


A/C DELAY UNIT

Location: In forward left hand corner of engine compartment on relay panel.

Lower R/H side, below A/C main relay.



Wiring Diagram

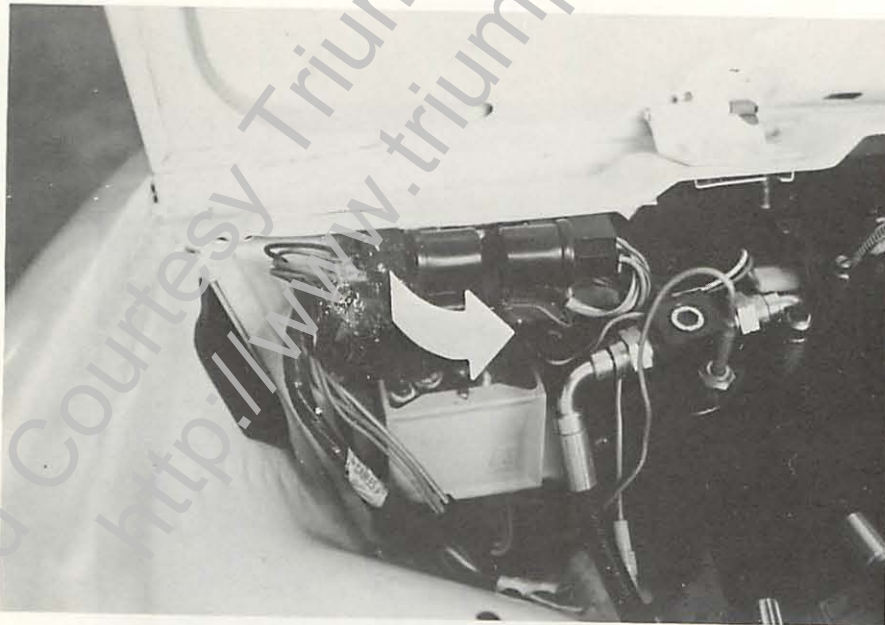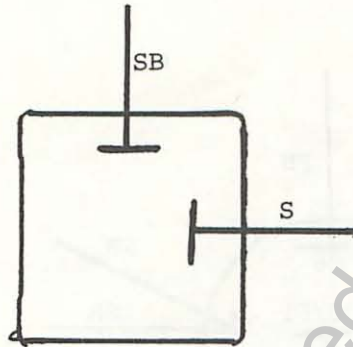

A/C PROTECTION DIODE

Location: At forward left hand corner of engine compartment on relay panel, in harness (not concealed).



Wiring Diagram

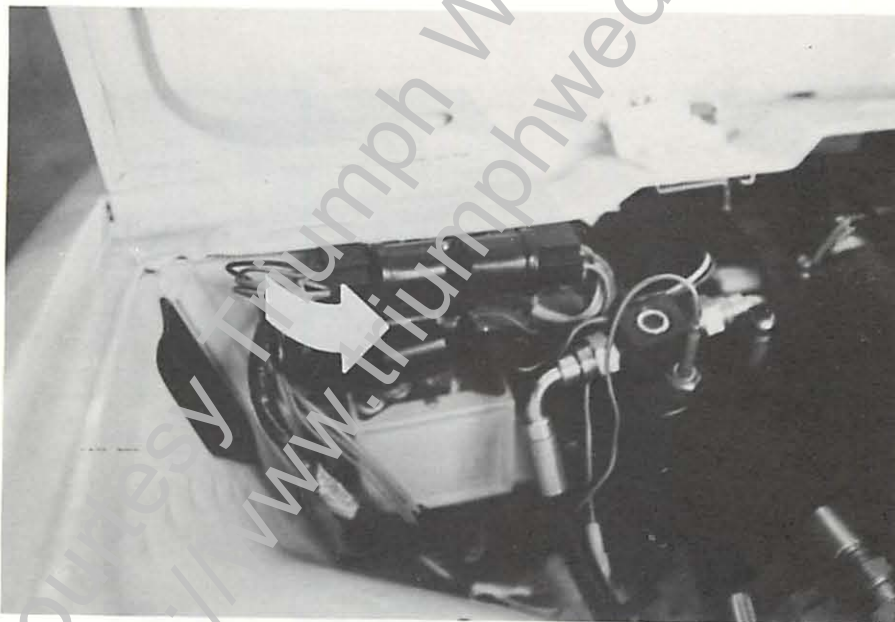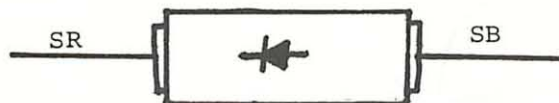

RADIATOR THERMOSTAT (FOR COOLING FANS)

Location: In upper left hand corner of radiator.


Wiring Diagram

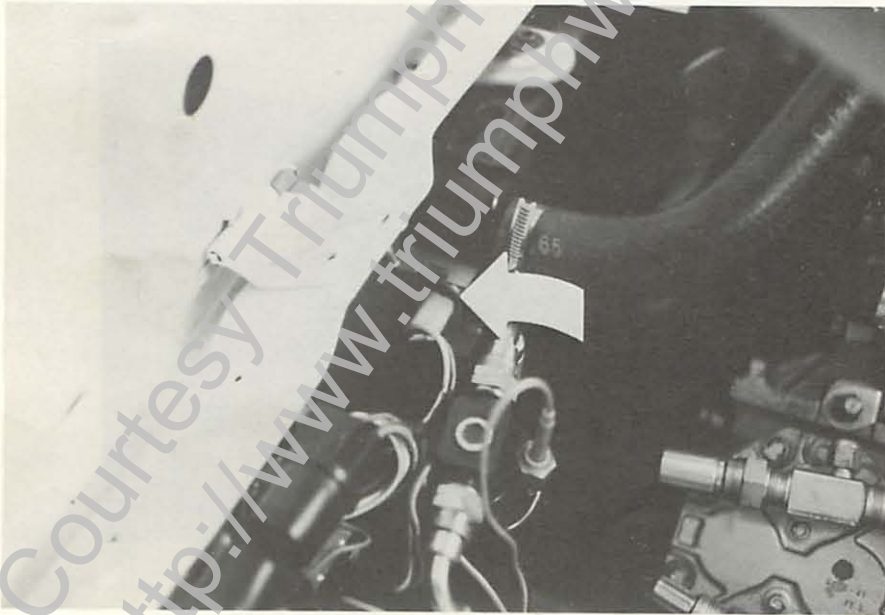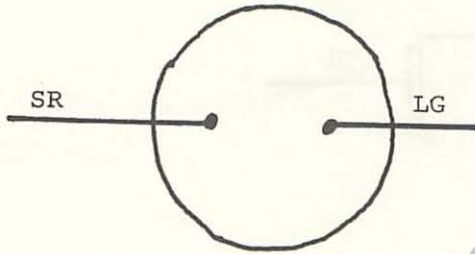

FULL THROTTLE CUT-OUT SWITCH

Location: Beneath carburetors, on throttle cable mounting plate.



Wiring Diagram

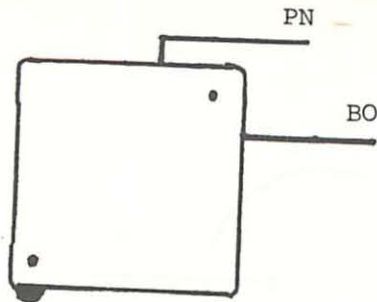

F.A.S.D. (AUTO-CHOKE) DE-ICING HEATER

Location: At base of F.A.S.D. unit, attached to forward carburetor.

Wiring Diagram

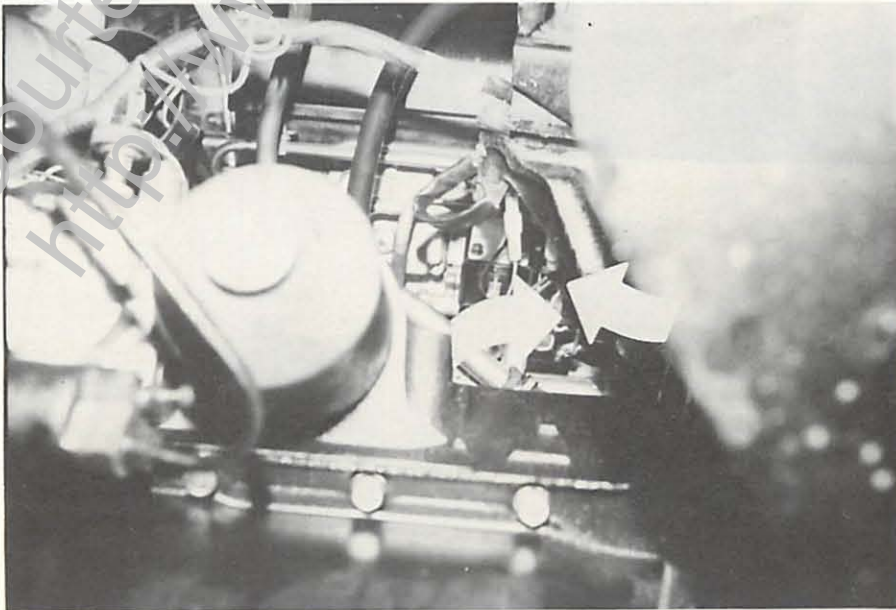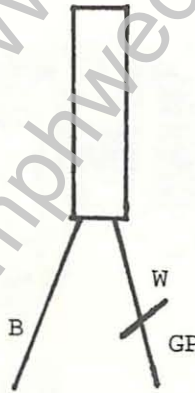

F.A.S.D. DE-ICING HEATER THERMOSTAT

Location: Under intake manifold, just inboard of rear carburetor.

Wiring Diagram

