ITEM T80/017

SUBJECT: DRIVE BELT TENSION

MODELS: TR8

It is essential to use a belt tensioning gauge when adjusting drive belt tension.

The following specifications should be strictly adhered to:

ential to use a belt tensioning gau	age when adjusting drive belt tension
wing specifications should be strictly adhered to:	
Air Conditioning Compressor Belt Power Steering Pump Belt Alternator Belt	90 - 100 ft/lb 90 - 100 ft/lb 80 - 85 ft/lb
Air Pump Belt (TR8 carburetor only)	80 0 85 ft/lb

Provided Courtes VIIII IIII Provided Courtes VIIII Provided Courtes When fitting new belts in service, the engine should be run for five minutes after fitting the belt. The tension must then be adjusted to the figures quoted above.

D.J.B.